

# THE MARKERS ARE NOT DRY!

You just need to activate and prime them...  
Please follow the instructions below:


<h2>ACTIVATING MARKERS</h2>  <h3>1. SHAKE</h3> <p><b>STEP 1: SHAKE</b></p> <p>Close and shake the markers. Make sure the marker's head is properly screwed on and that the cap is properly closed and then:</p> <p><b>Shake the marker for exactly 30 seconds.</b></p>	<h3>2. PUMP</h3>  <p><b>STEP 2: PUMP</b></p> <p>Remove the cap and hold the marker vertically onto a paper towel or napkin. Press down and release the tip repeatedly, until it fills with ink.</p> <p>In each press, hold down a bit before releasing. Once the color saturates the tip completely, you are ready to write on the board.</p> <p><b>You will need about 30-50 pumps for the ink to start flowing out. If it doesn't, repeat step 1.</b></p>
--	--

Please **repeat those two steps** again and again until the ink will flow completely. Some markers might take longer than others to get saturated, but **none of them are dry**, so please be patient.

If during future usage, the tip starts drying up and there is not enough ink in your writing, repeat the steps to saturate the tip.

We know it might be a bit annoying to do that for all 8 markers, but once each one is saturated properly, it will work like a charm and you will enjoy bright and beautiful colors with a vibrant look, just be patient and repeat those steps.

## **ERASING THE BLACKBOARD:**

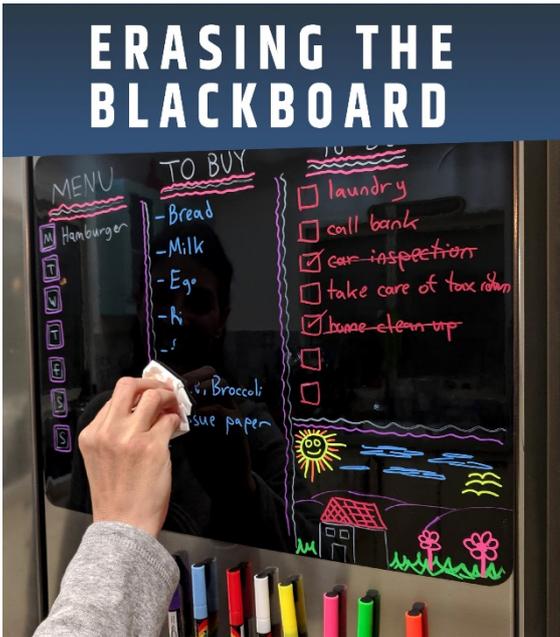

**For erasing small parts or making small corrections**, start with a dry cloth/paper towel.

If you find it a bit difficult, you can use a second wet one – water removes the ink immediately!

**For erasing the board completely**, you will find it easier to take it off the fridge and place it on a flat surface like your kitchen table/counter.

**Use both a wet cloth/paper towel and a dry one to properly clean the board.**

## **FINAL NOTES:**

- 1. Please Check if your fridge is magnetic** - If regular magnets stick to your fridge, this magnetic board will too. Not all stainless steel fridge doors are magnetic, so please check yours!
- 2. Please check if your fridge has the required space** - The intended fridge door/side should have room for the magnetic board, which is 17.5" X 13.5", and for the magnetic markers. All items should lie on a flat surface, without any bumps / fridge logo. If needed, you can also split the board into smaller boards using scissors (it is best to mark exactly where you want to cut with a ruler and one of the markers).
- 3. Attach the magnetic markers to an area outside of board areas** - Please place these items directly on the fridge surface but outside of the magnetic board areas for the best magnetic pull force.
- 4. Use only proper markers and keep them closed when not in use** - Please make sure you are using only wet-erase blackboard markers. For longer durability, make sure to put the cap back on immediately after using each marker.

**For support, feel free to contact us directly at [info@HMmagnets.com](mailto:info@HMmagnets.com) (Reply within 24 hours).**

**We appreciate your business!**

Sincerely,

**Christa**

**HMmagnets Founder**

