

Magnetic Dry-Erase 17.5" x 13.5" Monthly Calendar for the Refrigerator

WHAT'S INSIDE:




- 1 Calendar (17.5" x 13.5" Horizontal)
- 8 Whiteboard markers
- 1 Magnetic eraser
- 1 User instructions manual

- **Free bonus!** 3 magnetic blank boards (Size: 5" x 8")

BEFORE FIRST USE:

- 1. If the board doesn't fit your fridge:** we also have a vertical version of the monthly calendar. The intended fridge door/side should have room for the large magnetic board, which is 17.5" in width and 13.5" in height, and for the other included magnetic items (5" x 8" small boards, markers and eraser). They need to lie on a flat surface, without any bumps / fridge logo.
- 2. Please check if your fridge is magnetic:** If regular magnets stick to your fridge, this magnetic board will too. Not all stainless steel fridge doors are magnetic, so please check yours!
- 3. Wipe Before First Use:**

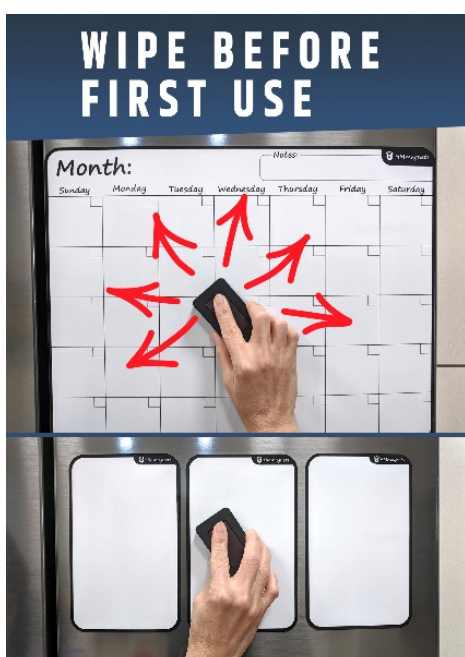

Please take **1-2 minutes** and do a one-time thorough wipe off on **the entire surface of the boards**. You can use the included eraser, a dry paper towel or a kitchen cloth. This will prevent the possible remaining residues on the board from causing the ink to run before it gets dry.



If, during usage, the ink runs in some specific area or spots, just give this area a good wipe to solve this immediately.

PROPER USE:

1. Months with 6 Weeks:



Every year there are up to three months that have 6 weeks. During these months you will find that **one or two days (at the most)** will need a sixth row on the board. In 2020, it will only occur on May 31 and August 30-31.

Our board contains only 5 rows for maximizing the size of each day for increasing the writing space. We believe this design provides the best overall experience because this issue **only occurs a few days a year**.

Our simple solution is to write those extra days **in the last row** or **in the beginning of the first row**– which were not intended to be used anyway.

Do note that all monthly calendars of this size and type have the same layout of 5 rows. We just wanted to let you know so you can enjoy it straight out of the box when it comes!

2. Attach the magnetic markers and eraser to an area outside of board areas - Please place these items directly on the fridge surface but outside of the magnetic board areas for the best magnetic pull force.

3. Use only proper markers and keep them closed when not in use - Please make sure you are using only dry-erase whiteboard markers. For longer durability, make sure to put the cap back on immediately after using each marker.

4. Erasing the boards – Markers can easily be erased from the boards, using the eraser included or even a dry paper towel or cloth. If marker ink remains on the boards for longer than about 40 days, you may find it too dry for a quick wipe. In this case, the best option is to wipe it off with some deodorant or alcohol, using a dry paper towel and the ink will come off immediately.

5. Cleaning the eraser - After multiple uses, the eraser might need some clean up itself. Quickly rinse it with water and gently rub the eraser surface with your finger until all the marks come off. Once you finish, let it dry completely.

For support, feel free to contact us directly at info@HMmagnets.com (Reply within 24 hours).

We appreciate your business!

Sincerely,

Christa

HMmagnets Founder

